

<b>1</b>	<b>APPLICATION</b> .....	<b>3</b>
<b>2</b>	<b>OVERVIEW COMPONENTS (FIG. A)</b> .....	<b>3</b>
<b>3</b>	<b>PACKAGE CONTENT LIST</b> .....	<b>3</b>
<b>4</b>	<b>SYMBOLS</b> .....	<b>4</b>
<b>5</b>	<b>GENERAL SAFETY RULES</b> .....	<b>4</b>
5.1	<i>Training</i> .....	4
5.2	<i>Preparation</i> .....	5
5.3	<i>Operation</i> .....	5
5.4	<i>Maintenance and storage</i> .....	6
<b>6</b>	<b>SAFETY WARNINGS</b> .....	<b>6</b>
<b>7</b>	<b>SAFETY WARNINGS GASOLINE</b> .....	<b>6</b>
<b>8</b>	<b>ASSEMBLY</b> .....	<b>7</b>
8.1	<i>Attaching the grass box (Fig 1)</i> .....	7
8.2	<i>Attaching the handles (Fig 2)</i> .....	7
8.3	<i>Adjusting the cutting height (5)</i> .....	7
<b>9</b>	<b>OPERATION</b> .....	<b>7</b>
9.1	<i>Read the engine manual before using the lawn mower</i> .....	7
9.2	<i>Starting the engine</i> .....	7
9.3	<i>Self-propelling function</i> .....	7
9.4	<i>Protective cover of the driving belt (Fig 3)</i> .....	7
<b>10</b>	<b>4 IN 1</b> .....	<b>8</b>
10.1	<i>What is mulching</i> .....	8
10.2	<i>Different uses</i> .....	8
10.2.1	<i>Retrofitting for mulching mower (Fig 4)</i> .....	8
10.2.2	<i>Resetting for side-discharge mowing (Fig 5)</i> .....	8
10.2.3	<i>Mowing with the grass catch bag</i> .....	8
10.3	<i>Mowing tips</i> .....	9
<b>11</b>	<b>MAINTENANCE</b> .....	<b>9</b>
11.1	<i>Oil (fill / check)</i> .....	9
11.2	<i>Changing /draining the oil</i> .....	10

<b>11.3</b>	<b><i>Draining the fuel tank / carburettor</i></b> .....	<b>10</b>
<b>11.4</b>	<b><i>Replacing and cleaning the spark plug</i></b> .....	<b>10</b>
<b>11.5</b>	<b><i>Lubrication instructions</i></b> .....	<b>10</b>
<b>11.6</b>	<b><i>Maintenance schedule</i></b> .....	<b>11</b>
<b>12</b>	<b>CLEANING</b> .....	<b>11</b>
<b>12.1</b>	<b><i>Cleaning the air filter</i></b> .....	<b>11</b>
<b>12.2</b>	<b><i>Replacing the blade</i></b> .....	<b>12</b>
<b>12.3</b>	<b><i>Cleaning the mower housing</i></b> .....	<b>12</b>
<b>13</b>	<b>TROUBLESHOOTING</b> .....	<b>13</b>
<b>14</b>	<b>TECHNICAL DATA</b> .....	<b>14</b>
<b>15</b>	<b>NOISE</b> .....	<b>14</b>
<b>16</b>	<b>STORAGE INSTRUCTIONS (OFF SEASON)</b> .....	<b>14</b>
<b>17</b>	<b>WARRANTY</b> .....	<b>15</b>
<b>18</b>	<b>ENVIRONMENT</b> .....	<b>16</b>
<b>19</b>	<b>DECLARATION OF CONFORMITY</b> .....	<b>16</b>

# LAWN MOWER 190cc 502mm POWXG6026

## 1 APPLICATION

The purpose of this lawn mower is to cut grass. This lawn mower has been designed for cutting grass areas in a domestic garden. It is not designed for commercial use.



**WARNING!** Read this manual and general safety instructions carefully before using the appliance, for your own safety. Your power tool should only be passed on together with these instructions.

## 2 OVERVIEW COMPONENTS (FIG. A)

- |                              |                              |
|------------------------------|------------------------------|
| 1. Self-drive control handle | 7. Oil cap / dipstick        |
| 2. Brake control lever       | 8. Fuel cap                  |
| 3. Muffler/exhaust           | 9. Starter handle            |
| 4. Grass catch box           | 10. (upper handle) lock knob |
| 5. Height adjusting lever    | 11. Side discharge flap      |
| 6. Deck                      | 12. Throttle                 |

## 3 PACKAGE CONTENT LIST

- Remove all packing materials
- Remove remaining packaging and transit supports (if existing)
- Check the completeness of the packing content
- Check the appliance, the power cord, the power plug and all accessories for transportation damages.
- Keep the packaging materials as far as possible till the end of the warranty period. Dispose it into your local waste disposal system afterwards.



**WARNING** Packing materials are no toys! Children must not play with plastic bags! Danger of suffocation!


















- 1 x gasoline lawn mower
- 1 x Manual
- 1 x Grass catch box



**When parts are missing or damaged, please contact your dealer.**

## 4 SYMBOLS

In this manual and/or on the machine the following symbols are used:

 	<p>Read manual before usage</p>	 	<p>Warning! Flying objects. Beware of thrown objects hit by cutting attachment. Keep bystanders away.</p>
 	<p>Danger – rotating blades. Keep hands and feet away from sharp parts. Keep hands away from blades, Don't touch the blades when starting or while operating the unit.</p>	 	<p>Fuel is flammable, keep fire away. Allow engine to cool for at least 2 minutes before refuelling.</p>
 	<p>Toxic fumes! Don't operate inside house. Petrol engines emit carbon monoxide. DO NOT run in enclosed area.</p>	 	<p>Wear hearing protection &amp; eye protection</p>
 	<p>When repairing, please take out the spark plug. Then repair according to the operation manual.</p>	 	<p>Caution: Hot engine Do not touch a hot silencer or cylinder. You may get burned. These parts get extremely hot from operation. When turned off they remain hot for a short time</p>
 <p>In accordance with essential applicable safety standards of European directives.</p>			

## 5 GENERAL SAFETY RULES

**WARNING:** When using petrol tools, basic safety precautions, including the following, should always be followed to reduce the risk of serious personal injury and/or damage to the unit. Read all these instruction before operating this product and retain these instructions for future reference.

### 5.1 Training

- Read the instructions carefully. Be familiar with the controls and the proper use of the equipment;
- Never allow children or people unfamiliar with these instructions to use the lawn mower. Local regulations can restrict the age of the operator;
- Never mow while people, especially children, or pets are nearby;

- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

### **5.2 Preparation**

- While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;
- Thoroughly inspect the area where the equipment is to be used and remove all objects which can be thrown by the machine;



#### **WARNING- Petrol is highly flammable.**

- store fuel in containers specifically designed for this purpose;
- refuel outdoors only and do not smoke while refueling;
- add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot;
- if petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapours have dissipated;
- replace all fuel tank and container caps securely;
- Replace faulty silencers;
- Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance;

### **5.3 Operation**

- Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect;
- Mow only in daylight or in good artificial light;
- Avoid operating the equipment in wet grass, where feasible;
- Always be sure of your footing on slopes;
- Walk, never run;
- For wheeled rotary machines, mow across the face of slopes, never up and down;
- Exercise extreme caution when changing direction on slopes;
- Do not mow excessively steep slopes;
- Use extreme caution when reversing or pulling the lawn mower towards you;
- Stop the blade(s) if the lawn mower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawn mower to and from the area to be mowed;
- Never operate the lawn mower with defective guards, or without safety devices, for example deflectors and/or grass catchers, in place;
- Do not change the engine governor settings or overspeed the engine;
- Disengage all blade and drive clutches before starting the engine;
- Start the engine carefully according to instructions and with feet well away from the blade(s);
- Do not tilt the lawn mower when starting the engine;
- Do not start the engine when standing in front of the discharge chute;
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times;
- Never pick up or carry a lawn mower while the engine is running;
- Stop the engine and disconnect the spark plug wire, make sure that all moving parts have come to a complete stop and, where a key is fitted remove the key:
  - Before clearing blockages or unclogging chute;
  - Before checking, cleaning or working on the lawn mower;

- After striking a foreign object. Inspect the lawnmower for damage and make repairs before restarting and operating the lawn mower;
- If lawn mower starts to vibrate abnormally (check immediately);
- Stop the engine and disconnect the spark plug wire, make sure that all moving parts have come to a complete stop and, where a key is fitted remove the key:
- Whenever you leave the lawn mower;
- Before refueling;
- Reduce the throttle setting during engine shut down and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing;
- Go slow when using a trailing seat.

#### **5.4 Maintenance and storage**

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition;
- never store the equipment with petrol in the tank inside a building where fumes can reach an open flame or spark;
- Allow the engine to cool before storing in any enclosure;
- To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease;
- Check the grass catcher frequently for wear or deterioration;
- Replace worn or damaged parts for safety;

## **6 SAFETY WARNINGS**

- Operate the lawn mower only with the grass box and/or the deflector plate installed.
- Stop the engine before emptying the grass box or adjusting the cutting height.
- Keep your hands and feet away from the area under the lawn mower or under the grass discharge, while the engine is running.
- Before mowing, clear the lawn of any foreign objects which could be thrown up by the lawn mower.
- Keep children, other persons and pets at a safe distance, while operating the lawn mower.
- Never tilt the lawn mower while starting it.

## **7 SAFETY WARNINGS GASOLINE**



**WARNING: Use extra care in handling fuels. They are flammable and the vapours are explosive. The following points must be observed.**

- Use only an approved container.
- Never remove the fuel cap or add fuel with the power source running. Allow engine exhaust components to cool before refuelling.
- Do not smoke.
- Never refuel the machine indoors.
- Never store the machine or fuel containers inside, where is an open flame, such as a water heater.
- If fuel is spilled, do not attempt to start the power source, but move the machine away from the area of spillage before starting.
- Always replace and securely tighten the fuel cap after refuelling.
- If the tank is drained, this should be done outdoors.

## 8 ASSEMBLY

### 8.1 Attaching the grass box (Fig 1)

- Put the metal frame in the grass box. (A)
- Fix the grass box to the metal frame. (A)
- Fold the deflector plate upwards, and insert the grass box. (B)

### 8.2 Attaching the handles (Fig 2)

Unfold the handles, and screw together the parts of the handle with the two screws and nuts.

### 8.3 Adjusting the cutting height (5)

Before adjusting the cutting height, switch off the engine. Let the cutting blade come to a complete standstill before making any adjustment of the cutting height. Adjustment can be done either to the "+" or to the "-" direction. Adjustment takes place in steps. Make sure that the adjustment lever securely snaps in at the desired height position.


## 9 OPERATION

### 9.1 Read the engine manual before using the lawn mower.

The lawn mower is delivered without engine oil: Add 0.6 litres of engine oil, before starting the engine.

### 9.2 Starting the engine

After proper assembly of the lawn mower, start the engine as follows:

- Put the lever on START or .
- Pull the engine control lever (3) towards the handle. Pull the recoil starter, until resistance is felt, and then pull it firmly.
- When the engine runs, put the throttle (2) to the "RUN" position.



**The blade starts to rotate after start-up of the engine. Keep the engine control lever (3) in working position during operation of the lawn mower. The engine will stop as soon as you release the engine control lever.**

### 9.3 Self-propelling function

To activate the self-propelling function press the self-propelling lever (1) towards the handle.



**WARNING: The lawn mower immediately starts moving. To stop the movement, release the self propelling lever (1). The lawn mower will then stop immediately.**

### 9.4 Protective cover of the driving belt (Fig 3)

Do not try to open the protecting cover of the driving belt.

If the protecting cover of the driving belt is damaged, it must be replaced by the manufacturer, your dealer or a person with a similar qualification.

**10 4 IN 1**

These lawn mowers can be retrofitted from its normal function, based on the application purpose:

- From lawn mower with rear discharge to:  
Mulching mower or as side-discharge mower.

**10.1 What is mulching**

When mulching, the grass is cut in one working step, then finely chopped and returned to the grass strip as natural fertilizer.

Hints for mulch-mowing:

- Regular cut-back by max. 2cm from 6cm to 4cm grass height.
- Use a sharp cutting knife
- Do not mow wet grass
- Set to max. motor speed
- Only move at working pace
- Regularly clean mulching wedge, housing inner side and mowing blade

**10.2 Different uses**

**10.2.1 Retrofitting for mulching mower (Fig 4)**



**WARNING: only with a stopped motor and standstill cutter.**

1. Raise the rear cover and remove the grass catch bag.
2. Push the mulching wedge into the deck. Lock the mulching wedge with the button into the opening on the deck.
3. Lower the rear cover again.

**10.2.2 Resetting for side-discharge mowing (Fig 5)**



**WARNING: only with a stopped motor and standstill cutter.**

1. Lift the rear cover and remove the grass catch bag.
2. Mount the discharge channel.
3. Lift sideward flap for side discharge
4. Mount the discharge guide for side discharge on the support pin of the sideward flap.
5. Lower the sideward flap- the flap lies on the discharge channel.

**10.2.3 Mowing with the grass catch bag**



**WARNING: only with a stopped motor and standstill cutter.**

1. For mowing with the grass catch bag, remove the mulching wedge and discharge channel for side discharge and mount the grass catch bag.
2. Removing the mulching wedge.
  - Lift rear cover and remove the mulching wedge.
  - Removing the discharge guide for side discharge:
3. Lift sideward flap and remove discharge channel.
  - The sideward flap automatically closes the discharge opening on the housing by mean of spring force.



- -Regularly clean the sideward flap and discharge opening from grass rest and stuck dirt.

### **10.3 Mowing tips**

- Under certain conditions, such as very tall grass, it may be necessary to raise the cutting height to reduce resistance ( prevent overload of the engine) and leaving clumps of grass clippings. It may also be necessary to run the lawn mower over the area a second time.
- For extremely heavy cutting, reduce the width of cut by over lapping previously cut paths and mow slowly.
- The pores in the cloth grass catcher can become blocked with dirt and dust and will collect less grass. To prevent this, regularly hose down the grass catcher and let dry before re using.
- Keep the top of the engine (around the starter) clear and clean of grass clippings and chaff. This will help engine air flow and extend engine life.

## **11 MAINTENANCE**

**IMPORTANT** - Regular, careful maintenance is essential for keeping the safety level and original performance of the machine unchanged in time.

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Regular maintenance is essential for safety and performance.
- Never store the equipment with fuel in the tank inside a building where fumes can reach an open flame, a spark or a source of extreme heat.
- Allow the engine to cool before storing in any enclosure.
- To reduce the fire hazard, keep the engine; exhaust silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease. Do not leave containers with grass cuttings in doors.
- Replace worn or damaged parts for safety. For reasons of safety, do not use the equipment with worn or damaged parts. Parts are to be replaced and not repaired. Parts that are not of the same quality can damage the equipment and be dangerous for your safety.
- If the fuel tank has to be drained, this should be done outdoors and when the engine is cool.
- Wear strong work gloves when removing and reassembling the blade.
- Check the blade's balance after sharpening.
- Check the self-closing guard and grass-catcher frequently for wear and deterioration.
- Whenever the machine is to be handled, transported or tilted you must:
  - wear strong working gloves;
  - grasp the machine at the points that offer a safe grip, taking account of the weight and its distribution.

### **11.1 Oil (fill / check)**

Before each subsequent use the oil level must be checked and if necessary topped up with SAE30 engine oil.

- Put on your mower on a level surface.
- Unscrew & remove the oil cap/dipstick (7) on the side of the engine, the oil level must be between upper (max.) & lower (min.) limit.

**CAUTION** : DO NOT overfill engine with oil, or it will smoke heavily from the muffler on start-up

- Re-tighten oil cap securely;
- Wipe clean spilled oil.

Important: Change oil every 50 hours or every season.

### **11.2 Changing /draining the oil.**

The oil drain plug is located under the dipstick, at the base of the engine.

Have a container ready to catch the oil.

Remove the drain plug.

Once the oil has been emptied, replace the drain plug.

Make sure that the washer is in place !

To fill proceed as described under 11.1 oil (fill/check).

Start the engine and allow it to run briefly. Stop the engine, wait one minute and check the oil level. Top up if necessary.

### **11.3 Draining the fuel tank / carburettor**

- Place an approved gasoline container below the carburettor, and use a funnel to avoid spilling fuel.
- Remove the drain bolt, then move the fuel valve lever to the ON position.
- After all the fuel has drained into the container, reinstall the drain bolt and washer.
- Tighten the drain bolt securely.

### **11.4 Replacing and cleaning the spark plug**

(Only use F6RTC (Nanjing Huade NHSPDL) with engine DY1P64F)

- After the engine has cooled down, remove the spark plug with the provided socket wrench.
- Clean the spark plug with a wire brush.
- Use a setting gauge (adjustment gauge), and adjust the electrode gap to 0.75 mm.
- Insert the spark plug carefully by hand, in order to avoid any wrong installation (not properly aligned to thread).
- After the spark plug has been tightened manually, use a wrench to tighten the spark plug tightly to its washer.

### **11.5 Lubrication instructions**



**Caution: disconnect spark plug before servicing.**

- **WHEELS**-Lubricate the ball bearings in each wheel at least once a season with a light oil.
- **BLADE CONTROL** - Lubricate the pivot points on the start/stop handle of the engine and the brake cable at least once per season with a light oil. The start/stop handle of the engine must freely move in both directions.

### 11.6 Maintenance schedule

REGULAR SERVICE PERIOD (4)		Before Each Use	First Month or 5 Hrs	Every 3 Months or 25 Hrs	Every 6 Months or 50 Hrs	Every Year or 100 Hrs	Every Two Years or 250 Hrs
Perform at every indicated month or operating hour interval, whichever comes first.							
Engine oil	Check	X					
	Replace		X		x (1)		
Air cleaner	Check	X		clean(2)	clean(2)		
	Replace					X	
Spark plug	Check/adjust					X	
	Replace						X
Flywheel brake pad (A types)	Check				X		
Fuel tank and filter	Clean					X (3)	
Fuel tube	Check	Every 2 years (Replace if necessary) (3)					
Valve clearance	Check-adjust					X (3)	
Combustion chamber	Clean	After every 200 hours (3)					

(1) Service more frequently when used in a dusty areas.

(2) Change oil every 25 hours when used with heavy load or in high ambient temperatures.

(3) These items should be serviced by a technician.

(4) For commercial use, record hours of operation to determine proper maintenance intervals.

## 12 CLEANING



**CAUTION: Do not hose the engine. Water can damage engine or contaminate the fuel system.**

- Wipe deck with dry cloth.
- Hose under deck by tilting the mower so that the spark plug is up.



**Do not tilt mower more than 30° towards the rear. If you want to tilt it more, first drain fuel tank completely (see 11.3).**

### 12.1 Cleaning the air filter

Remove the air filter cover, and take out the filter element. To avoid objects from falling into the air chamber, attach the air filter cover again. Wash the filter element with warm soapy water, rinse it carefully, and let it dry in the open air.



**Warning! Never run the engine without the air filter element in place.**

The following items are deemed as critical for safety:

- Cutting blade and cutting blade holder.

- All protective covers of the lawn mower and the power unit.  
The aforementioned parts must always be replaced by spare parts authorised by the manufacturer or by equivalent spare parts. Please contact your local dealer about this.

### **12.2 Replacing the blade**



**WARNING: Do not lift the lawn mower, while the blade is still running. Wait, until the device comes to a complete standstill. Before doing any service works, remove the spark plug connector from the spark plug.**



**After assembly of the blade, turn the lawn mower to its normal working position (blade unit facing to the ground). Attach the spark plug connector to the spark plug, and perform a test run of the engine. In case of unusual vibrations, please contact your local dealer. Do not start the lawn mower in a tilted position.**

As regards to safety, the cutting blade is deemed to be a critical item. Therefore only cutting blades marked with the label "DAYEE DY0608-12" can be used.

To remove the blade: remove the screw, check the blade holder for proper function, and replace any worn or damaged parts.

Before installing the blade again, check that the cutting edges are properly aligned to the rotation direction of the engine. The blade screw must be fixed with an electrodynamic tool with a tightening torque of 3.7 kg/m (37 Nm).

**THE BLADE:** The blade is made of pressed steel. To ensure efficient working results, sharpen the blade in regular intervals, around every 25 working hours. Make sure the blade is being sharpened evenly. Insert a small metal angle (metal edge profile) ( $\varnothing 2$  or  $\varnothing 3$  mm) into the centre orifice of the blade. The blade must be aligned horizontally.

If the blade is not aligned horizontally, align it properly by grinding off some metal from the side bending downwards.

### **12.3 Cleaning the mower housing**

Dirt deposits make the start difficult, affect the quality of the cut and the discharge of the grass. Dirt and grass residues are easiest to remove immediately after the mowing. To avoid fouling the floor, the underside must be cleaned on the grass.

- Remove the mulching plug / grass catcher.
- Fit the hose connector to the lawn mower and turn on the water tap.
- Start the lawn mower and switch it off again after about 30 seconds. The rotating blade bar will throw the water onto the underside of the lawn mower and thus clean it.
- Turn off the water tap and remove the hose connector.
- Clean the top with a cloth (do not use any sharp objects).

## 13 TROUBLESHOOTING

Problem	Probable cause	Corrective action
Engine does not start	Fuel tank is empty.	Fill tank with fuel
	Air cleaner element is dirty.	Clean air cleaner element
	Spark plug loose.	Tighten spark plug to 25-30 Nm.
	Spark plug wire loose or disconnected from plug.	Install spark plug wire on spark plug.
	Spark plug gap is incorrect.	Set gap between electrodes at 0.7 to 0.8mm
	Spark plug is defective	Install new, correctly gapped plug
	Carburettor is flooded with fuel	Remove air cleaner element and pull starter rope continuously until carburettor clears itself and install air cleaner element.
Engine difficult to start or loses power.	Faulty ignition module	Contact the service agent.
	Dirt, water, or stale fuel tank.	Drain fuel and clean tank. Fill tank with clean, fresh fuel
	Vent hole in fuel tank cap is plugged.	Clean or replace fuel tank cap.
	Air cleaner element is dirty.	Clean air cleaner element.
Engine operates erratically.	Spark plug is defective.	Install new, correctly gapped plug
	Spark plug gap is incorrect.	Set gap between electrodes at 0.7 to 0.8mm
	Air cleaner element is dirty.	Clean air cleaner element
Engine idles poorly.	Air cleaner element is dirty.	Clean air cleaner element
	Air slots in engine shroud are blocked.	Remove debris from slots.
	Cooling fins and air passages under engine blower housing are blocked.	Remove debris from cooling fins and air passages.
Engine idles poorly.	Gap between electrodes of spark plug is too close.	Set gap between electrodes at 0.7 to 0.8mm
Engine overheats	Cooling air flow is restricted.	Remove any debris from slots in shroud, blower housing, air passages
	Incorrect spark plug.	Install FGRTC spark plug and cooling fins on engine
Mower vibrates abnormally	Cutting assembly is loose.	Tighten blade
	Cutting assembly is unbalanced	Balance blade.

## 14 TECHNICAL DATA

Model	POWXG6026
Rotation speed	Max 2800min <sup>-1</sup>
Cutting width	502 mm
Cylinder capacity	190 cc
Engine power	2.4 kW
Weight	31 kg
Collect box	50l
Engine type	Briggs&Stratton 4-stroke engine
Cutting height	25-65
Number of height positions	8
Self tracking	Yes
Material housing	Steel
Oil tank capacity	0.6 l
Fuel tank capacity	1.0 l
Diameter front wheel	190 mm
Diameter rear wheel	267 mm
Central adjustable height setting	Yes
4 functions	Side discharge
	Mulching function
	Rear discharge
	Collecting

## 15 NOISE

Noise emission values measured according to relevant standard. (K=3)

Acoustic pressure level LpA	84 dB(A)
Acoustic power level LwA	96 dB(A)



**ATTENTION! Wear hearing protection when sound pressure is over 85 dB(A).**

aw (Vibration):	3.3 m/s <sup>2</sup>	K = 1.5 m/s <sup>2</sup>
-----------------	----------------------	--------------------------

## 16 STORAGE INSTRUCTIONS (OFF SEASON)

To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer.

Empty the gas tank, start the engine and let it run until the fuel lines and carburetor are empty. Use fresh fuel next season.

Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

The following steps should be taken to prepare lawn mower for storage.

- Following the final cut of the season allow the fuel tank to run dry.
- Clean and lubricate mower thoroughly as described in the lubrication instructions.
- Refer to engine manual for correct engine storage instructions.

- Lightly coat mower's cutting blade with environmental safe chassis grease to prevent rusting.
- Store mower in a dry, clean area.

**NOTE:**

- When storing any type of power equipment in an unventilated or material storage shed, - Care should be taken to rust-proof the equipment. Using a light oil or silicone, coat the equipment, especially cables and all moving parts.
- Be careful not to bend or kink cables.
- If the starter rope becomes disconnected from rope guide on handle, disconnect and ground the spark plug wire. Grasp the start/stop handle of the engine and pull the starter

## **17 WARRANTY**

- This product is warranted as provided by law for a 36 -month period effective from the date of purchase by the first user.
- This warranty covers all material or production flaws excluding : batteries, chargers, defective parts subject to normal wear & tear such as bearings, brushes, cables, and plugs, or accessories such as drills, drill bits, saw blades, etc. ; damage or defects resulting from maltreatment, accidents or alterations; nor the cost of transportation.
- Damage and/or defects resulting from inappropriate use also do not fall under the warranty provisions.
- We also disclaim all liability for any bodily injury resulting from inappropriate use of the tool.
- Repairs may only be carried out by an authorised customer service centre for Powerplus tools.
- You can always obtain more information at the number 00 32 3 292 92 90.
- Any transportation costs shall always be borne by the customer, unless agreed otherwise in writing.
- At the same time, no claim can be made on the warranty if the damage of the device is the result of negligent maintenance or overload.
- Definitely excluded from the warranty is damage resulting from fluid permeation, excessive dust penetration, intentional damage (on purpose or by gross carelessness), inappropriate usage (use for purposes for which the device is not suitable), incompetent usage (e.g. not following the instructions given in the manual), inexpert assembly, lightning strike, erroneous net voltage. This list is not exhaustive.
- Acceptance of claims under warranty can never lead to the prolongation of the warranty period nor commencement of a new warranty period in case of a device replacement.
- Devices or parts which are replaced under the warranty therefore remain the property of Varo NV.
- We reserve the right to reject a claim whenever the purchase cannot be verified or when it is clear that the product has not been properly maintained. (Clean ventilation slots, carbon brushes serviced regularly, etc.).
- Your purchase receipt must be kept as proof of date of purchase.
- Your appliance must be returned undismantled to your dealer in an acceptably clean state, (in its original blow-moulded case if applicable to the unit), accompanied by proof of purchase.

## **18 ENVIRONMENT**

Should your appliance need replacement after extended use, do not discard it with the household rubbish but dispose of it in an environmentally safe way.

Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the trash or pour it on the ground.

## **19 DECLARATION OF CONFORMITY**



VARO N.V. - Joseph Van Instraat 9 - BE2500 Lier - BELGIUM, declares that,

Product: Selftracking gasoline lawn mower

Trade mark: POWERplus

Model: POWXG6026

is in conformity with the essential requirements and other relevant provisions of the applicable European Directives, based on the application of European harmonized standards. Any unauthorized modification of the apparatus voids this declaration.

European Directives (including, if applicable, their amendments up to the date of signature);

2006/42/EC

2004/108/EC

2000/14/EC

Annex VI

LwA

96dB(A) / 96dB(A)

Testing Authority Intertek / Milton Keynes

97/68/EC

European harmonized standards (including, if applicable, their amendments up to the date of signature);

EN836 A4 : 2011

EN ISO 14982 : 2009

Keeper of the Technical Documentation : Philippe Vankerkhove, VARO – Vic. Van Rompuy N.V.

The undersigned acts on behalf of the company CEO,

Philippe Vankerkhove

Regulatory Affairs – Compliance Manager

11/12/13